Reloop Distribution Global Distribution GmbH Schuckertstr. 28 48153 Münster / Germany

Fax ++49/251/6099368

Subject to alterations.

Illustrations similar to original product.

Misprints excepted.

Copyright 2015









CELOOP

INSTALL INSTRUCTIONS





Compatible with Reloop RMX-10/22i/33i/60/80 and all future Reloop products with INNOFADER compatible logo

CAUTION!

For your own safety, please read this operation manual carefully before initial operation! All persons involved in the installation, setting-up, operation, maintenance and service of this device must be appropriately qualified and observe this operation manual in detail. This product complies with the requirements of the applicable European and national regulations. Conformity has been proven. The respective statements and documents are deposited at the manufacturer.

Warning! Dismantling your mixer could invalidate the warranty. If you are unsure of your ability to safely carry out this work then it is advised that you leave it to a qualified service technician

Check compatible mixers on www.reloop.com/reloop-rmx-innofader Safety instructions: Please always make sure the mixer is powered off and the power plug is unplugged.

HOW TO REPLACE THE CROSSFADER:


Remove the fader cap and the two screws shown in the red circle. Take off the crossfader plate carefully.



 






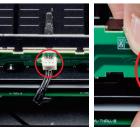








Now, take the mounting plate and fix it on the mini Innofader using the two screws to fasten it. Take the included adapter cable and insert the 4Pin connection to the mini Innofader socket.

The mounting plate should be in the correct upside-down position to match with your mixer.

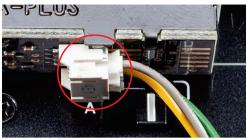



Now, plug the other end of the adapter cable to the mixer connection.

ATTENTION: The grey adapter cable shown in the image below must be aligned towards the grev cable from the mixer connection. If the fader doesn't work at all you probably did this wrong.





Place the mini Innofader into the unit and tighten the screws. Please be sure the socket connector is oriented to the right and the mounting plate sits flush and matches the mounting aroove.





Put the crossfader plate on the unit and place the two screws shown in the red circle to fix it. Put the fader cap on the shaft.



Reconnect power cable to the mixer and power on. The mini Innofader should now operate correctly. The Reloop mini Innfofader is already calibrated for perfect sharpness.

If you wish to adjust the CUT IN manually please refer to further manuals here:

www.reloop.com/reloop-rmx-innofader



